

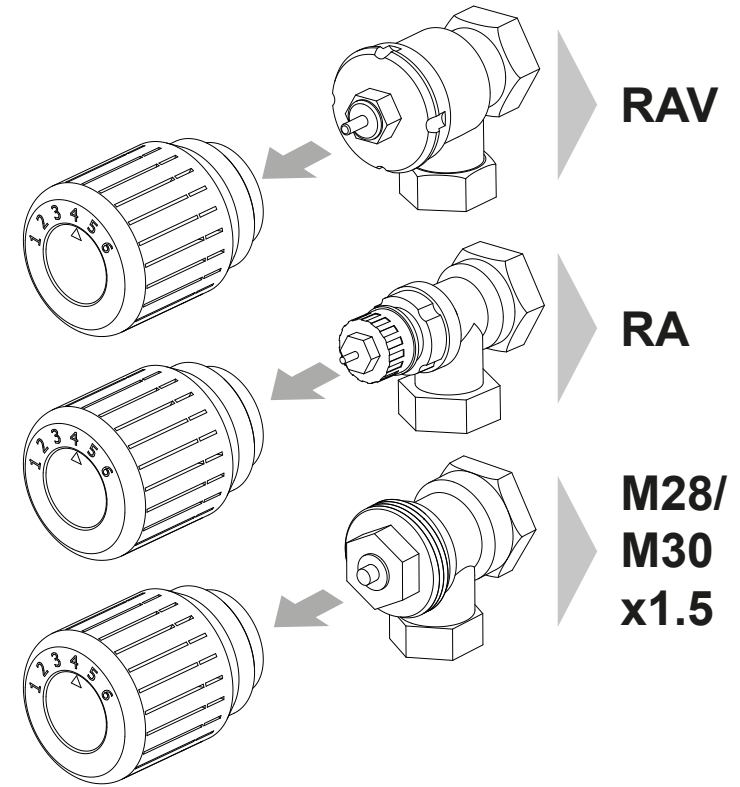
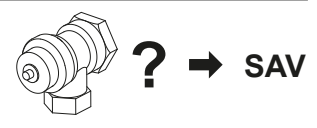
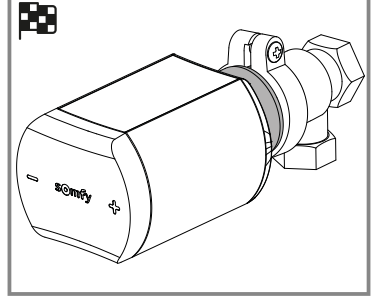
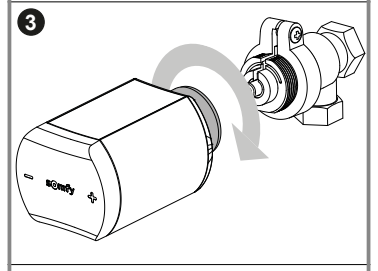
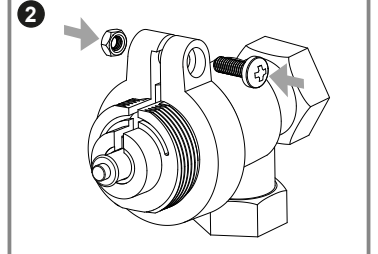


MOUNTING GUIDE FOR THERMOSTATIC VALVE






FR : Guide de montage de la tête thermostatique
 EN : Installation guide for thermostatic valve EN : Installation guide for thermostatic valve
 EN : Installation guide for thermostatic valve EN : Installation guide for thermostatic valve
 EN : Installation guide for thermostatic valve EN : Installation guide for thermostatic valve
 EN : Installation guide for thermostatic valve EN : Installation guide for thermostatic valve
 EN : Installation guide for thermostatic valve EN : Installation guide for thermostatic valve

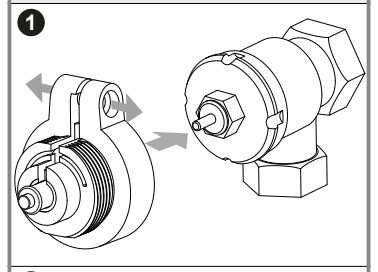





RAV

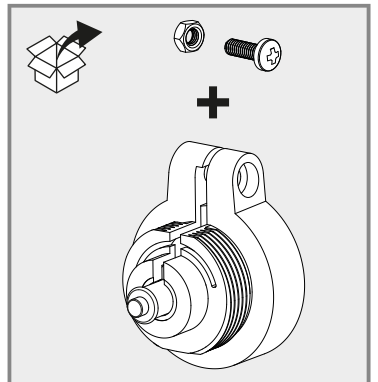

RA

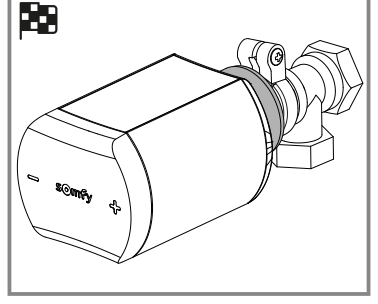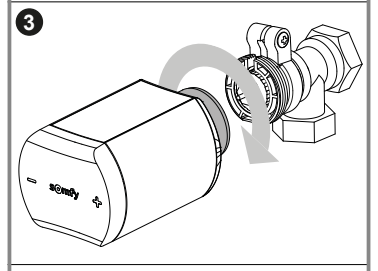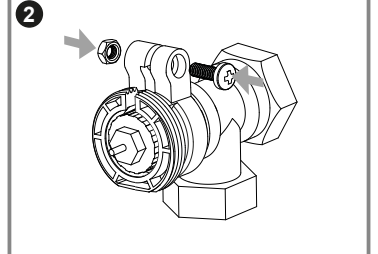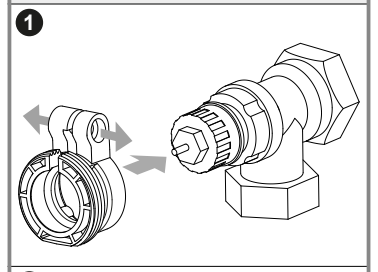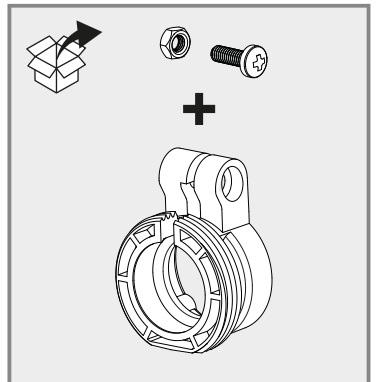

M28x1.5 / M30x1.5

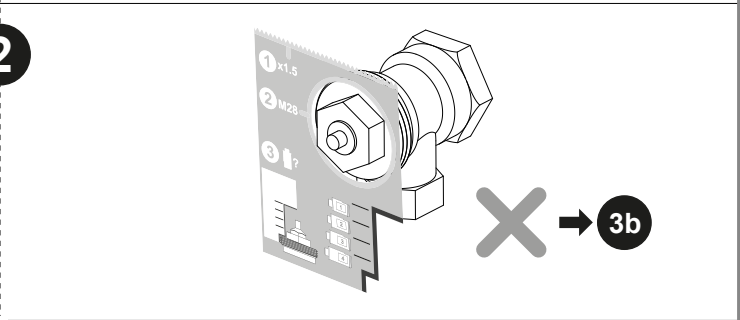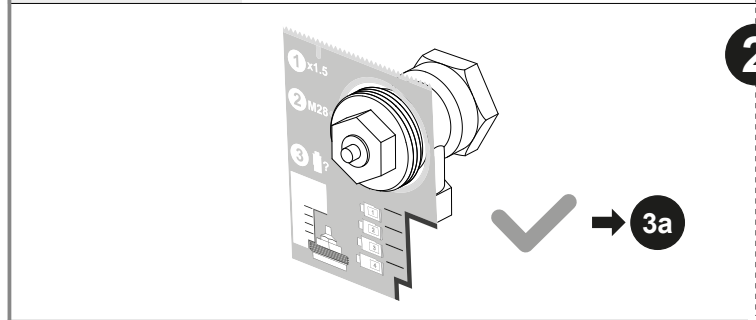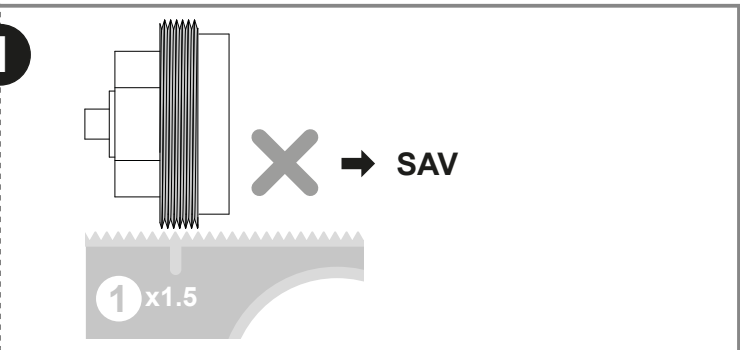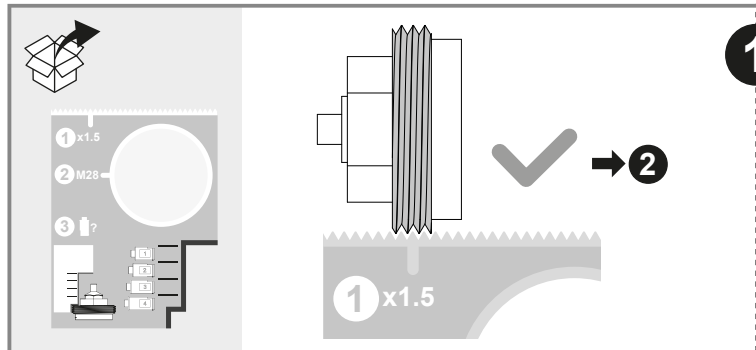

M28x1.5

M30x1.5

